Energy Absorption

A guide to kinetic energy management systems





What's in this Guide

- What is an Energy Absorber?
- Energy Absorption Terminology
- Types of Plascore Energy Absorbers
- Example: Drop Protection
- Example: Damping



Applications

- Crash Test Dummy Calibration
- Impact Protection
- Large Mass Drop Protection
- Overrun Protection
- Nuclear Industry Compliance
- Aerospace
- Automotive
- Blast Mitigation





What is an Energy Absorber?



"The basic concept
of energy absorption
is to take a moving
object's kinetic
energy and convert it
into internal work."



Before and after crushlite and AlTuCore assembly crushing

When a load is applied to the honeycomb it exhibits plastic deformation, in the form of crushing.

This deformation results in a constant force through the crushed thickness.

The work (Force x Distance) done by the energy absorber defines how much kinetic energy the system has absorbed.

Bitzer T. (1997). Honeycomb Technology Materials, Design, Manufacture, Applications and Testing. Great Britain: Chapman & Hall.








Energy Absorption Terminology

Below is a sample graph (using data from pre-crushed 320 PSI Crush Core) that explains the basic terminology of Plascore's energy absorbers.

320 PSI Crush Core (Pre-crushed)

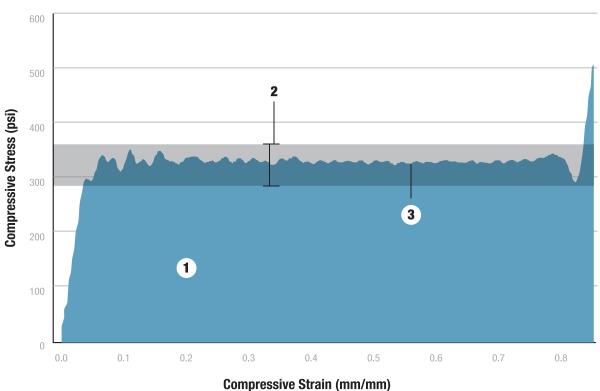


- Kinetic Energy Absorbed: Defined as the work (force x distance) done.
- Crush Strength Tolerance: The acceptable range the average crush strength can be.
- Crush Strength: Defined in accordance to ASTM D7336 as the average compressive stress during the core's stable crush strength region.

- 4. Crush Stroke: The length a part is crushed.
- Densification: Occurs when all material has been fully crushed. Compressive stress will increase exponentially from that point forward.
- Pre-crush: A procedure to eliminate peak bare compressive loading by initiating the crushing process on one side of the core.

Types of Plascore Energy Absorbers

Plascore manufactures two different materials that are ideal for energy absorption applications. The first of these is CrushLite, a lower density expanded aluminum honeycomb. The second is AlTuCore, a high-density corrugated material.

CrushLite

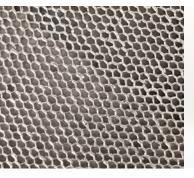



- Typically manufactured in 4' x 8' sheets
- Customer specified thicknesses
- Crush strengths ranging from 7.5 750 psi
- Tested per ASTM D7336
- Can be provided with or without pre-crush
- Typical thickness range: 1" 30"
- Minimum stroke of 70% of part thickness.

Standard* crush strength ranges:

_										
Density	1.0	1.6	1.6	2.0	2.3	2.3	3.4	3.1	3.7	4.2
Cell Size	3/8	3/8	1/4	3/16	1/4	1/4	1/4	1/8	3/8	3/8
Foil Gauge	0.0007	0.001	0.0007	0.0007	0.001	0.001	0.0015	0.0007	0.0025	0.003
Foil Alloy	5052	5052	5056	5052	5052	5056	5052	5056	5052	5052
Crush Strength (psi)	25	45	50	75	90	100	140	170	180	210
Density	5.2	4.5	4.5	5.4	5.7	6.0	5.7	6.1	8.1	8.1
Cell Size	1/4	1/8	1/8	3/8	3/16	1/4	3/16	1/8	1/8	1/8
Foil Gauge	0.003	0.001	0.001	0.004	0.002	0.003	0.002	0.0015	0.002	FC
Foil Alloy	3003	5052	5056	5052	5052	5052	5056	5056	5052	5052
Crush Strength (psi)	245	275	320	350	380	420	440	535	700	750

^{*}Alternative crush strengths available on our Crush Lite data sheet. Minimum order quantity may apply.

AITuCore





- Cylindrical built to order energy absorber
- Customized ID and OD, based on customer's needs
- Test method similar to ASTM D7336.
- Can be provided with or without pre-crush
- Typical thickness range: 0.30" 20"
- Custom crush strength ranges from ~1,000 psi to 8,000 psi
- Typical Stroke between 55% and 70% of part length, depending on density



The Problem: An engineer has been tasked with arresting a large tensioning weight used on an industrial conveyor belt. The tensioning weight poses a significant risk to equipment if it is allowed to plunge to the ground.

Knowns

Maximum Load on Support Structure	345,000 Kn		
Usable Support Structure Width	1 meter		
Usable Support Structure Length	1.1 meters		
Maximum Drop Height	3 meters		
Mass of Tension Weight	9,100		

Step 1:

Determine required crush strength to maximize load distribution.

Maximum Crush Strength = Maximum Load / CrushLite Area


Crush Strength = 0.38 MPa, or 56 psi

Step 2:

Select a material.

Referencing Plascore's CrushLite data sheet:

PACL - 1.6 - 1/4 - 0.0007 - 5056 with a Crush Strength of 50 psi +/-10% would be a perfect fit.

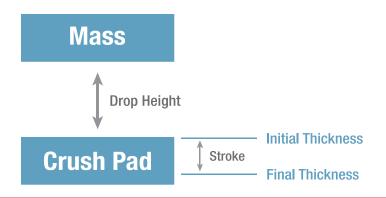

Unknowns

Required Crush Strength	TBD	psi or MPa		
Required Material	TBD	CrushLite		
Required Part Thickness	TBD	in or m		

Step 3:

Determine required part thickness:

Governing equation

Potential Energy (PE) = Work (W)

In this case:

PE = Mass x Gravity x (Drop Height + Stroke)

And

Work = Crush Strength x Area x Stroke

This results in the following equation:

Mass x Gravity x (Drop Height + Stroke) = Crush Strength x Area x Stroke

Solving the above equation for stroke:

Stroke = 0.92 m

Using this information and Plascore's advertised minimum stroke of 70%:

Part thickness = Stroke / Minimum Percent Stroke

Part thickness = 1.314 m of honeycomb

Step 4:

Request a quote from Plascore.



The Problem: An engineer is designing an amusement park ride and has the responsibly of ensuring the safety of the occupants. In this case the engineer is designing for a catastrophic cart-to-cart impact, and needs to ensure that the occupants are able to safely walk away. Based upon the usable area, the AlTuCore OD and ID have been predefined.

Knowns

Maximum Allowed "G" Load	3 Gs		
Cart Mass	2,000 Kg		
AlTuCore Outside Diameter	0.1 meters		
AlTuCore Inside Diameter	0.025 meters		
Worst-Case Cart Velocity	4 m/s		

Step 1:

Determine the required part length to achieve safe deceleration. First, we have to determine the required stroke.

"G" Load = (Velocity)² / (2 x Gravity x Stroke)

Solving for stroke

Stroke = 0.272 meters or 10.70 inches

Now we can use this information along with minimum available stroke of 55% to determine the required part length.

Part length = Stroke/Expected Percent Stroke Part length = 0.494 meters or 19.458 inches

Velocity

Impacting Cart



Unknowns

Required Stroke	TBD	inches or meters	
Part Length Required for Safe Deceleration	TBD	inches or meters	
Required Part Thickness	TBD	inches or meters	
Crush Strength	TBD	psi	

Step 2:

Determine the required crush strength.

Governing equation

Kinetic Energy = Work

in this case:

Kinetic Energy = $\frac{1}{2}$ x Mass x Velocity²

And

Work = Crush Strength x Area x Stroke

We arrive at the equation:

½ x Mass x Velocity² = Crush Strength x Area x Stroke

Solving for crush strength:

Crush Strength = 8.0 MPa or 1159 psi


Step 3:

Request a quote for AlTuCore from Plascore.







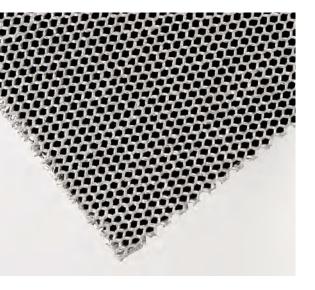



Corporate Headquarters

Plascore Incorporated 615 N. Fairview St. Zeeland, MI 49464-0170

Phone: 616.772.1220 Toll-Free: 800.630.9257 Fax: 616.772.1289

plascore.com sales@plascore.com

Europe

Plascore GmbH & CoKG

Feldborn 6

D-55444 Waldlaubersheim

Germany

Phone: +49(0) 6707.9143 0

Fax:+49(0) 6707.9143 40

plascore.de

sales.europe@plascore.de

Plascore, Inc. employs a quality management system that is AS/EN/JISQ 9100, ISO 9001:2008 and ISO 14001:2004 certified.

IMPORTANT NOTICE: The information contained in these materials regarding Plascore's products, processes, or equipment is intended to be up-to-date, accurate, and complete. However, Plascore cannot guarantee that this is always the case. Accordingly, it is a purchaser's or user's responsibility to perform sufficient testing and evaluation to determine the suitability of Plascore's products for a particular purpose. Information in these materials and product specifications does not constitute an offer to sell. Your submission of an order to Plascore constitutes an offer to purchase which, if accepted by Plascore, shall be subject to Plascore's terms and conditions of sale. PLASCORE MAKES TO WARRANTIES OF ANY KIND REGARDING THESE MATERIALS OR INFORMATION, EITHER EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Plascore owns and shall retain all worldwide rights in its intellectual property, and any other trademarks used in these materials are the property of their respective owners. The information in these materials shall not be construed as an inducement, permission, or recommendation to infringe any patent or other intellectual property rights of any third parties. 2021 Plascore, Inc. All Rights Reserved. v4.6.2021